

# Camloc


Motion Control



**ECONOLOC SHROUD**


## 1. End Fit Alignment

1. Hold the end fit at the shroud end securely, DO NOT hold the shroud.
2. Turn either the tube or the tube end fitting clockwise to align the end fittings.
3. DO NOT turn the shroud or shroud end fitting anti-clockwise to align.

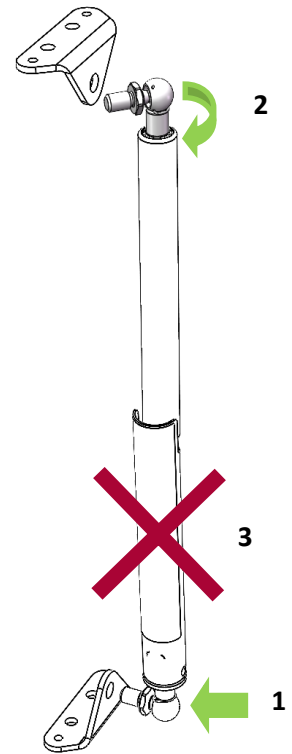


## 2. Shroud Alignment

1. DO NOT align by turning the shroud without first releasing the end fitting
2. Hold the tube securely
3. Turn the shroud end fitting anti-clockwise to release
4. Rotate the shroud to the desired position.
5. Re-tighten the shroud end fitting

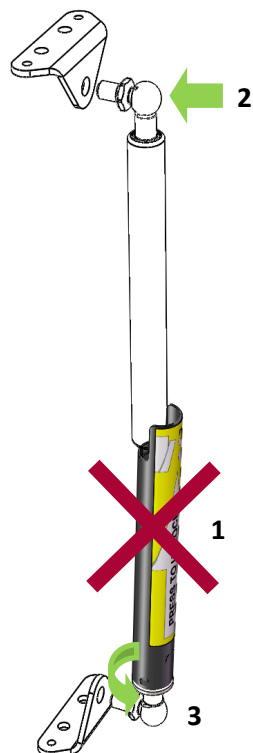

## Part Identification

1. Tube End Fitting
2. Tube
3. Shroud
4. Shroud End Fitting

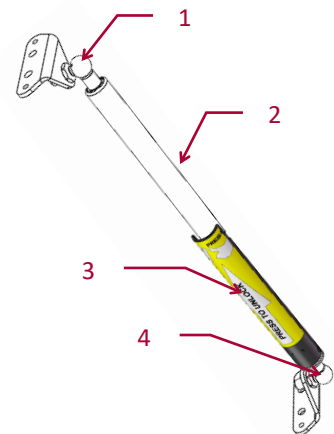

## Customer Support

Online

[www.camloc.com](http://www.camloc.com)

Email

[Info@camloc.com](mailto:Info@camloc.com)

Tel.

+44 (0)116 274 3600

**Camloc**  
Motion Control